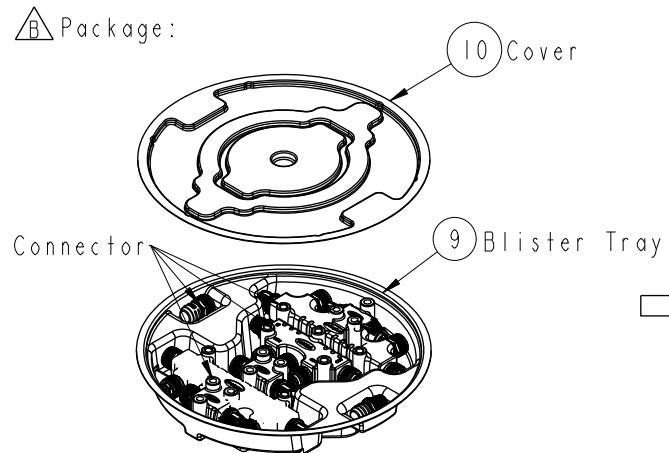



△Note:

- * 3 Tee adaptor: 2PCS
- * Female Terminator 1PCS
- * Male Terminator :1PCS
- * 4Tee adaptor connector 2pcs
- * 6 Tee adapter connector 2pcs
- * 2 Ends Cable, cable length 2m, 5m, 10m各1PCS,
- * All connector put into the blister tray
- * 注意繞線尺寸需符合圖面要求，否則會影響產品裝入彩盒。
- * 5pcs blister tray /Carton
- * Net weight: 7.8kg / Carton
- * Gross weight: 10.0Kq / Carton


UNIT:mm		TITLE NMEA2000 Starter Kit Metal, Pro Type			Amphenol LTW 安費諾亮泰企業股份有限公司	ITEM NO HMC-P-001	DRAWN BY Fisher Wang	DATE 2018-12-12
TOLERANCE		SCALE Free	SIZE A4	SHEET 1 OF 2		DWG NO HMC-P-001	CHECKED BY Victor Hung	DATE 2018-12-12
		REV. CA	WC-REV. A.2	QC:Inspection item		CUSTOMER ALTW	APPROVED BY Kevin Hu	DATE 2018-12-12

△ Package:


Step 1: Connector put in the Tray
將所有連接器裝入泡殼

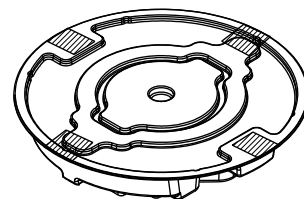


Step 2: Use adhesive tape bonding the blister tray and cover
使用膠帶粘合泡殼和上蓋

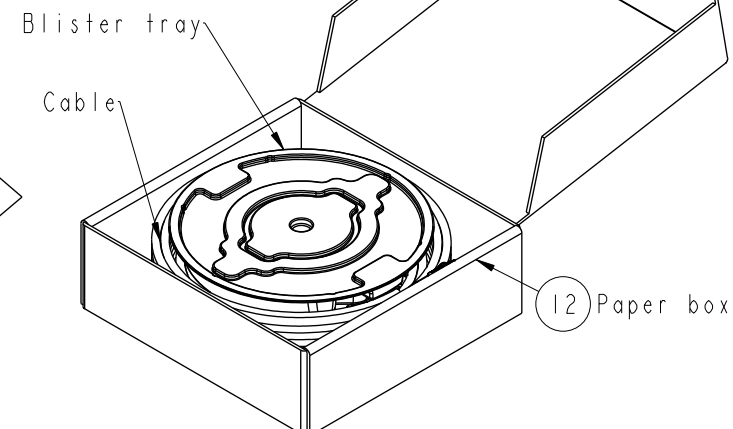


Step 3: First the cable into the paper box, then put the blister tray into the paper box
先將線材放入紙盒，然后再將裝好連接器的泡殼放入紙盒

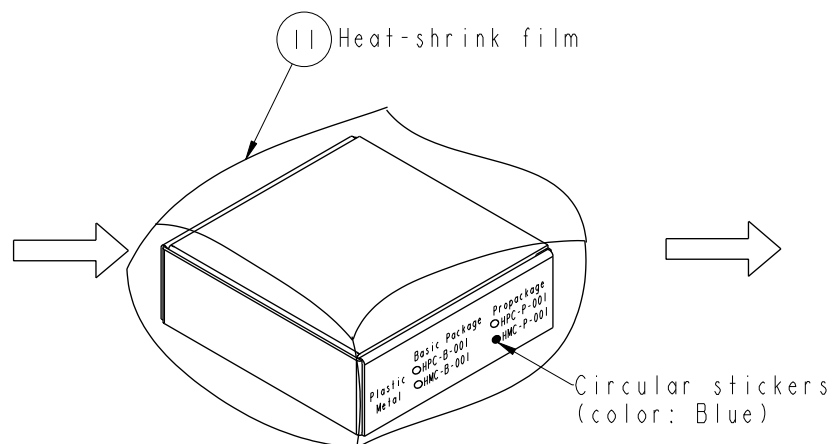

Step 4: Use a small circular stickers on cartons side, small circular sticker must be on the right product, and then do shrink film
使用一張圓形小貼紙貼于紙盒側邊，圓形貼紙需貼在正確的產品料號上，確認紙盒內部包裝的產品與圖面要求一致，然後封收縮膜包裝

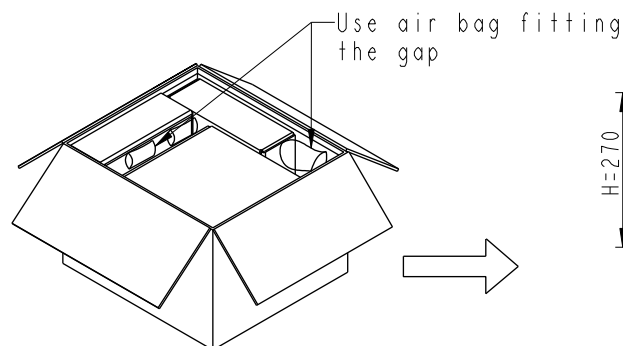

Step 5: First put a waterproof bag into carton, 5pcs paper box into the carton, use air bag filling the gaps
首先在外箱內放一個防水袋，每5個紙盒裝入一個外箱，多餘的空隙需用氣袋填滿

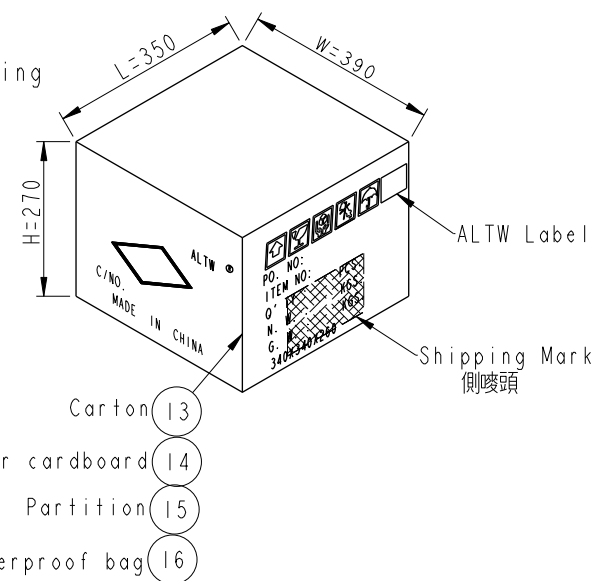

UNIT:mm		TOLERANCE		TITLE		ITEM NO		DRAWN BY		DATE	
				NMEA2000 Starter Kit		HMC-P-001		Fisher Wang		2018-12-12	
				Metal, Pro Type		HMC-P-001		Victor Hung		2018-12-12	
				SCALE Free		CUSTOMER		APPROVED BY		DATE	
				SIZE A4		ALTW		Kevin Hu		2018-12-12	
				SHEET 2 OF 2							
				REV. CA							
				WC-REV. A.1							
				QC: Inspection item							

Amphenol LTW
安費諾亮泰企業股份有限公司